



VersaLamp High Bay/Light Fixture Installation Instructions

Installation Overview:

The high bay fixtures include DMX controlled lamps that have a unique control address. Therefore, **the high bay fixtures must be installed in the correct order**. Each box and high bay fixture includes a number that corresponds to the layout drawing for this installation. **All high bay fixtures must be installed in the same direction or orientation**. All low voltage input and output cables must be on the same end of the high bay fixture. The cables are to be installed according to the included drawing.

The low voltage control cables have home run cables from the equipment rack position. The control cables have 3-Pin XLR male & female connectors on either end of the cable. The home run cables only have one female connector installed on each cable. The female connector goes to the high bay fixture. The bare tails are to be pulled to the equipment rack location.

The black low voltage control jumper cables have 3-Pin XLR male & female connectors on either end of the cable. These are daisy chained between the fixtures for each area. The included drawing shows how the cables are to be installed.

A CAT5e cable is to be installed from the equipment rack position to where the lighting is to be operated from or control location where the PC is to be located.

The power module in the equipment rack has two low voltage relay contacts. These relays are used for switching the lighting to "White". The use and installation of these relay controls are optional but are recommended.

Relay A: Fire System Contact


- The cable tail that is labeled "fire contact" is to be connected to a contact closure from the fire detection system of the building provided by others. This contact is used to shut down the lighting controller which will cause all of the controlled lighting to change to white in color.

Relay B: System Override Contact


- The system override switch with a low voltage (24/2/Shielded) cable that includes a light switch is to be installed wherever the proprietor/operator would like a to be able to switch the controlled lighting to white. This switch also shuts off the power strip and the equipment rack which causes the controlled lighting to switch to white in color. Please note; if the equipment rack will not power on; check to see if the override switch is in the off position or the fire contact has been triggered.

Installation:

1. The included drawing has fixture numbers that indicate which fixture is to be installed at each location.

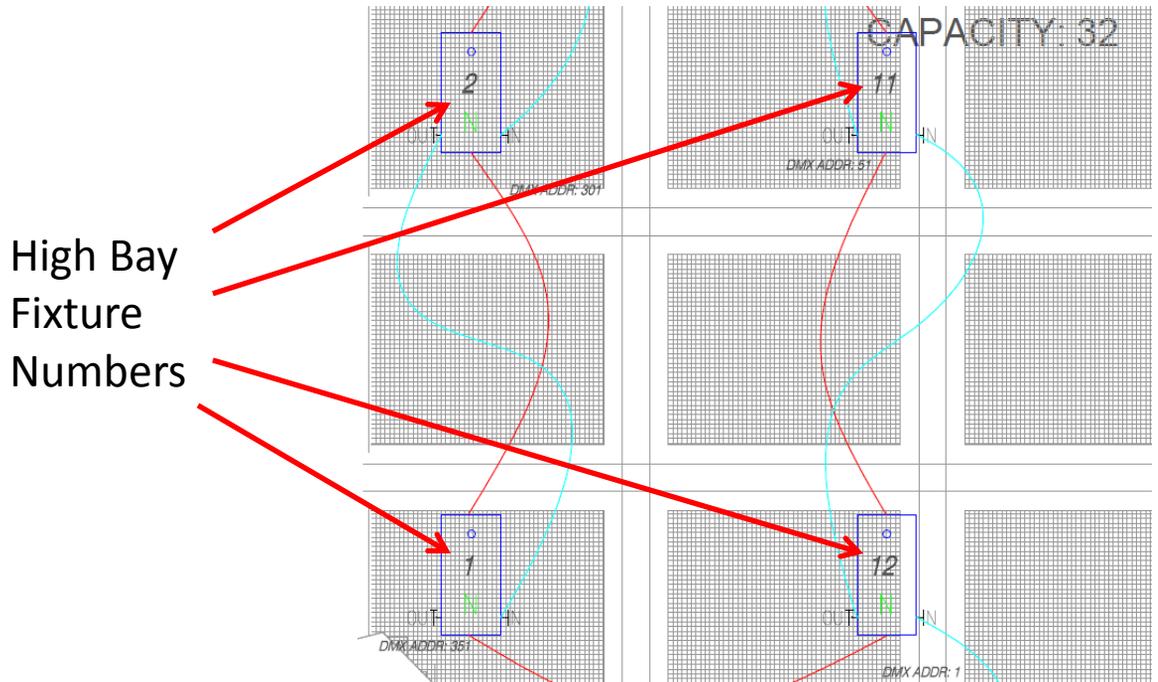

2. Each high bay includes a corresponding fixture number.

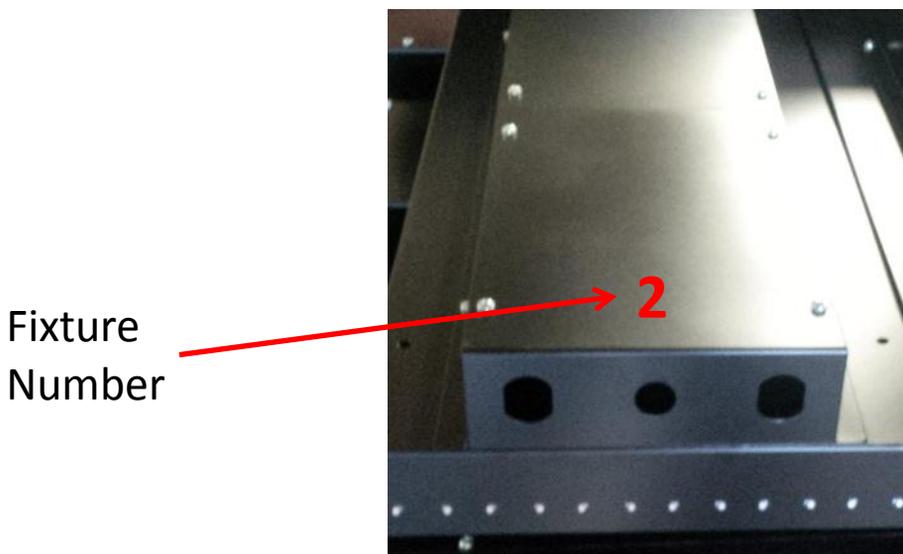

3. The order has been shipped with each box labeled with a fixture number. Each box includes two fixtures.

High Bay
Fixture
Numbers

	Fixture 1	
	Fixture 2	
Fixture 3	Fixture 5	Fixture 7
Fixture 4	Fixture 6	Fixture 8
Fixture 9	Fixture 11	Fixture 13
Fixture 10	Fixture 12	Fixture 14
Fixture 15	Fixture 17	Fixture 19
Fixture 16	Fixture 18	Fixture 20
Fixture 21	Fixture 23	Fixture 25
Fixture 22	Fixture 24	Fixture 26
Pallet 1 - 26 Fixtures		
(48"W x 48"L x 80"H)		

Pallet #1

Two Fixtures
Per Box


	Fixture 25	
	Fixture 26	
Fixture 27	Fixture 29	Fixture 31
Fixture 28	Fixture 30	Fixture 32
Fixture 33	Fixture 35	Fixture 37
Fixture 34	Fixture 36	Fixture 38
Fixture 39	Fixture 41	Fixture 43
Fixture 40	Fixture 42	Fixture 44
Fixture 45	Fixture 47	Fixture 49
Fixture 46	Fixture 48	Fixture 50
Pallet 2 - 26 Fixtures		
(48"W x 48"L x 80"H)		

Pallet #2


Pallet #3

	Fixture 51	
	Fixture 52	
Fixture 53	Fixture 55	Fixture 57
Fixture 54	Fixture 56	Fixture 58
Fixture 59	Fixture 61	Fixture 63
Fixture 60	Fixture 62	Fixture 64
Fixture 65	Fixture 67	Fixture 69
Fixture 66	Fixture 68	Fixture 70
Fixture 71	Fixture 73	Fixture 75
Fixture 72	Fixture 74	Fixture 76
Pallet 3 - 26 Fixtures		
(48"W x 48"L x 80"H)		


4. Install the high bay fixtures.

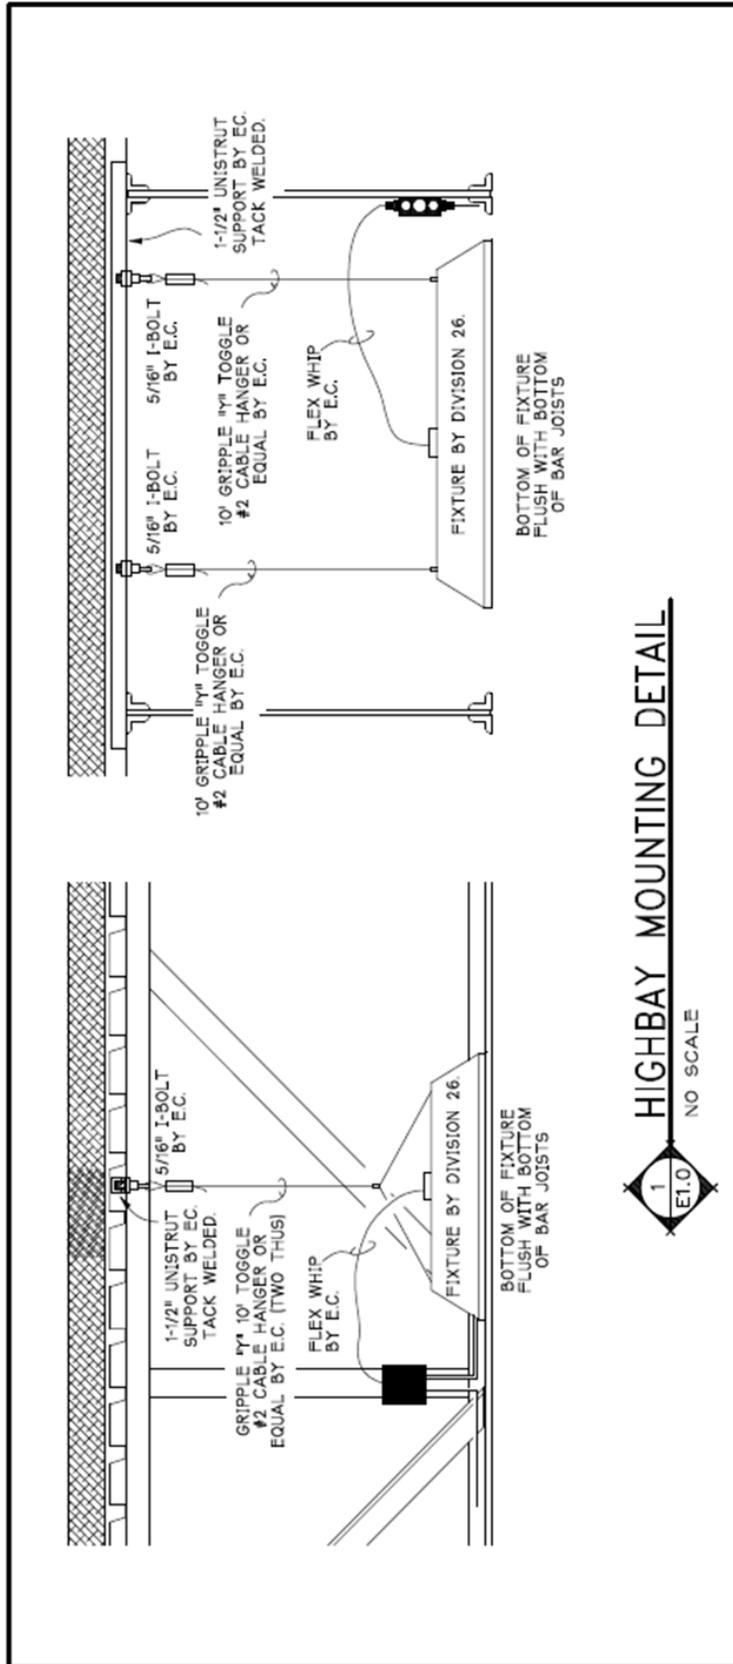


5. All fixtures must be installed in the same direction.

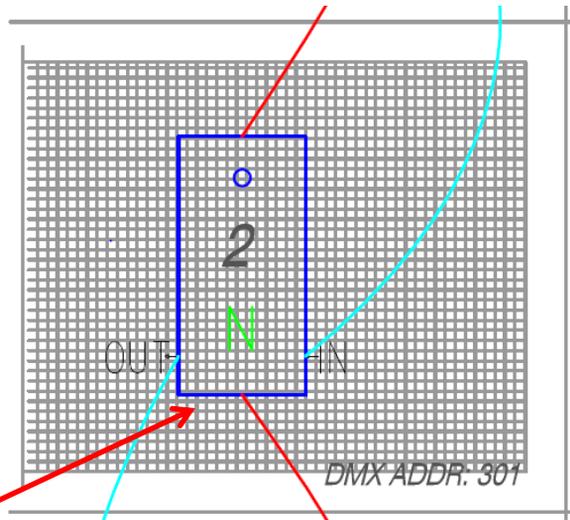

Control
Cables On
The Same
End For All
Fixtures

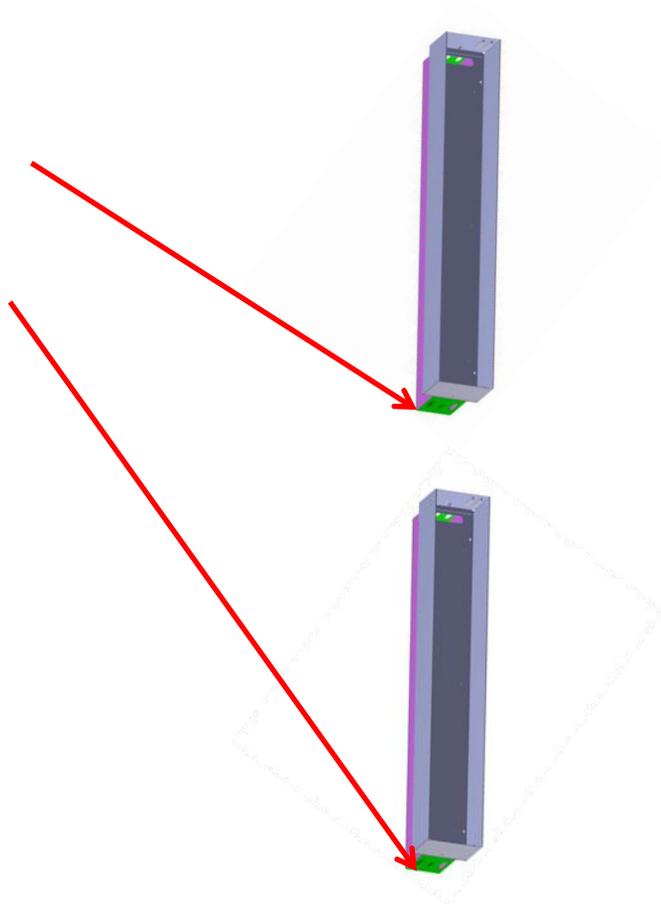


6. The low voltage control cables have home run cables (24 gauge, 2 conductors, shielded) from the equipment rack position. The home run cables only have one female connector installed on each cable. The female connector goes to the high bay fixture. The bare tails are to be pulled to the equipment rack position.

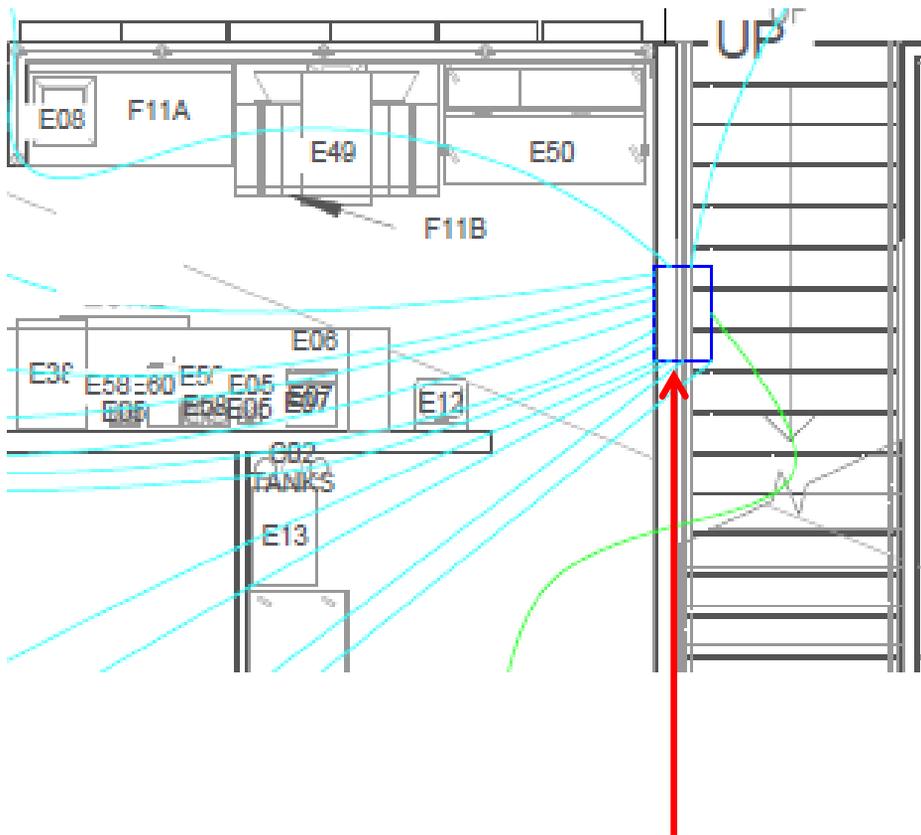

Equipment Rack
Position With Bare
Cable Tails

7. The black low voltage control jumper cables have 3-Pin XLR male & female connectors on either end of the cable. These are daisy chained between the fixtures for each area. The included drawing shows how the cables are to be installed. Starting with a fixture that has a female home run connector; pull the jumper cable female connector to the next fixture. So the fixture with the home run cable will have a female and a male connector.

Jumper Cables Between Each High Bay Fixture

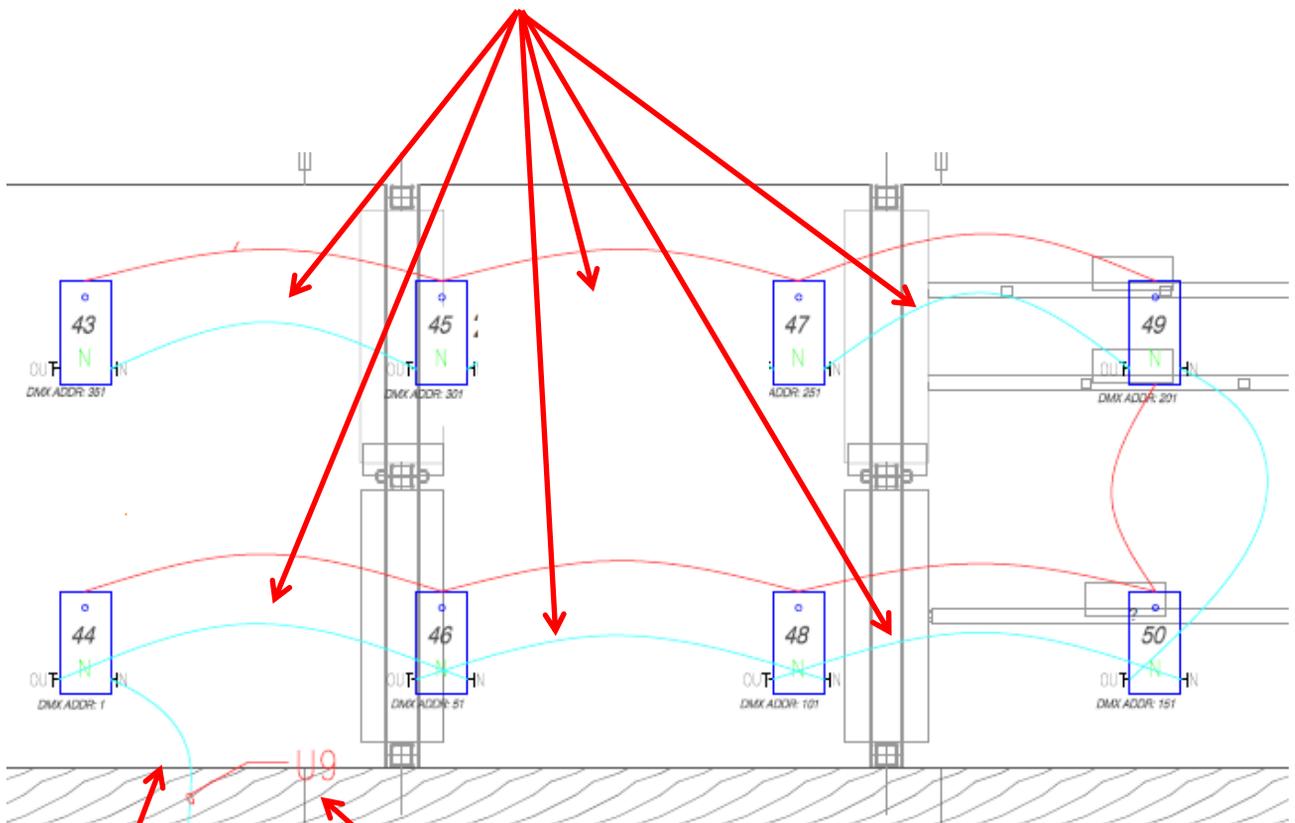


Home Run
Cable


Home Run
Cable
Number

8. The last high bay fixture output cable in each of the areas must have an end terminator installed. The end terminator is a male 3-pin XLR connector with a without a cable installed.

End Terminator

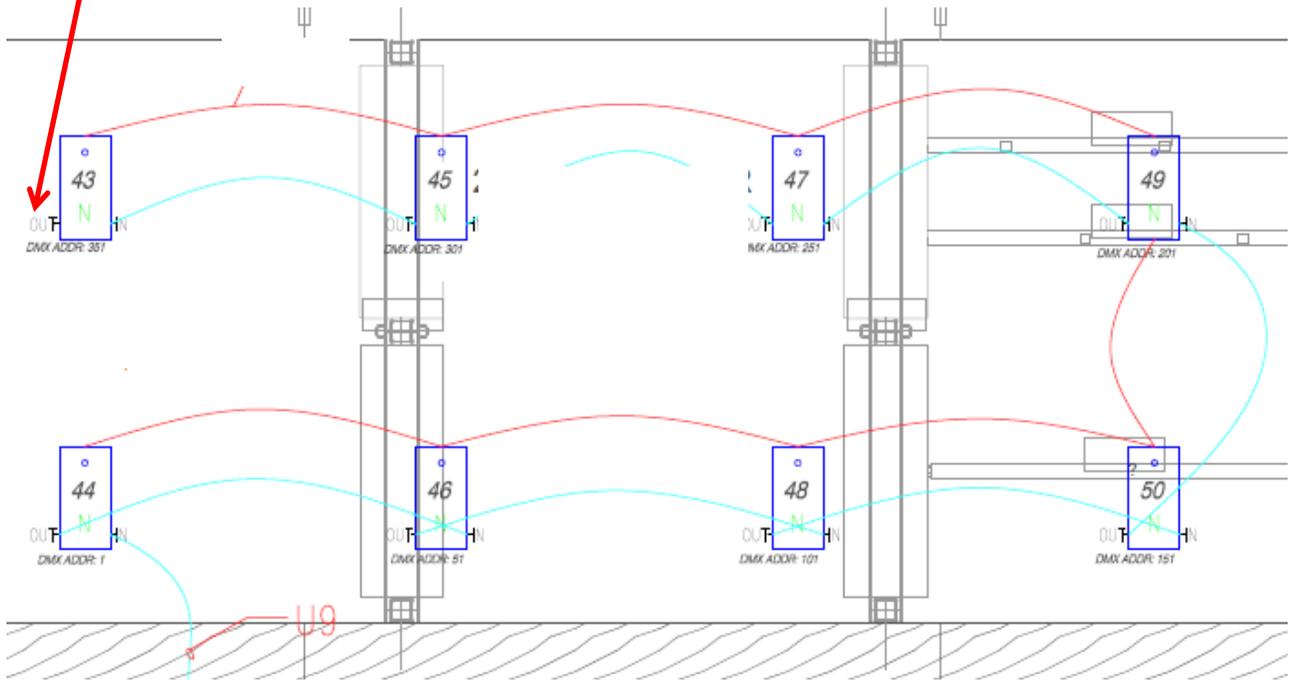


9. A CAT5e and an 18/2 shielded cable is to be installed from the equipment rack position to the desired control location.

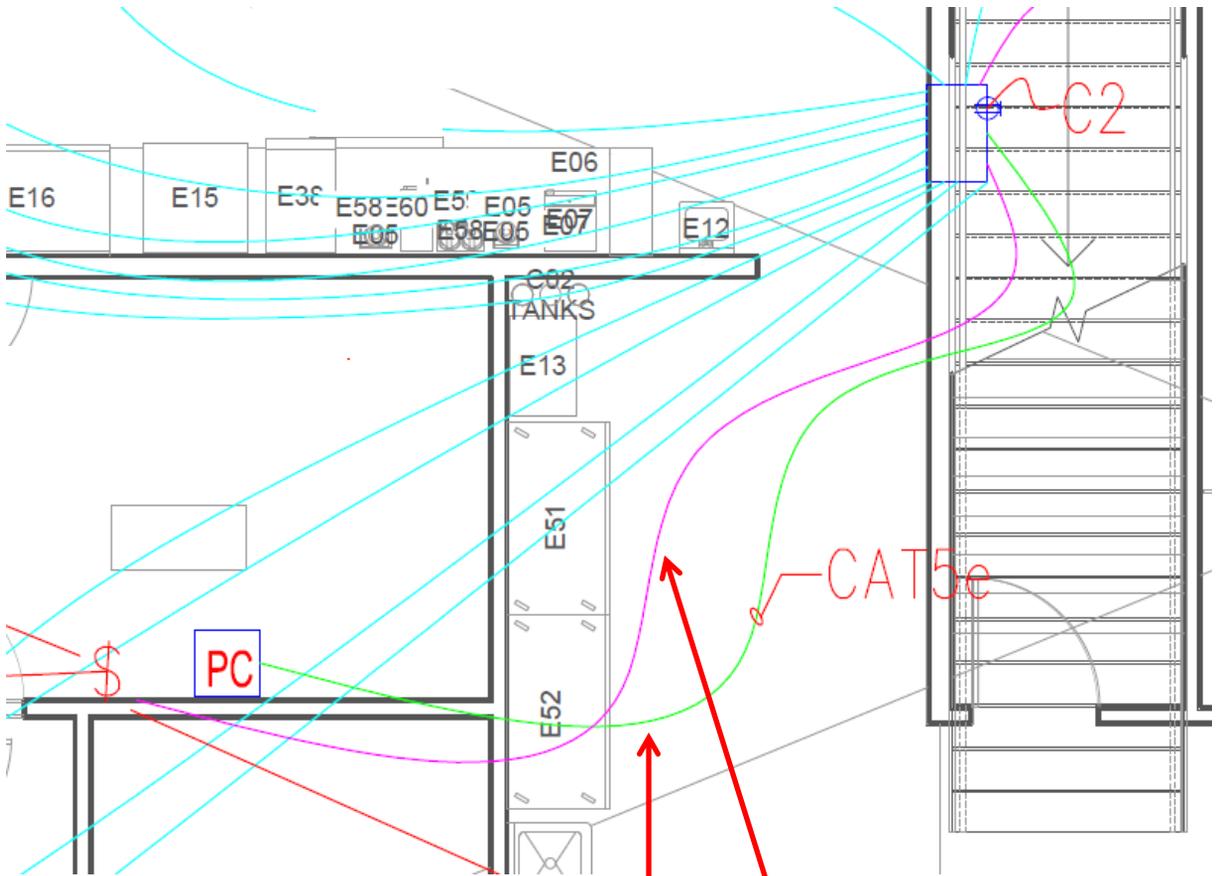


CAT5e Cable & 18/2 Shielded Cable

10. Install a 18/2 shielded cable from the fire system contact to the equipment rack position.

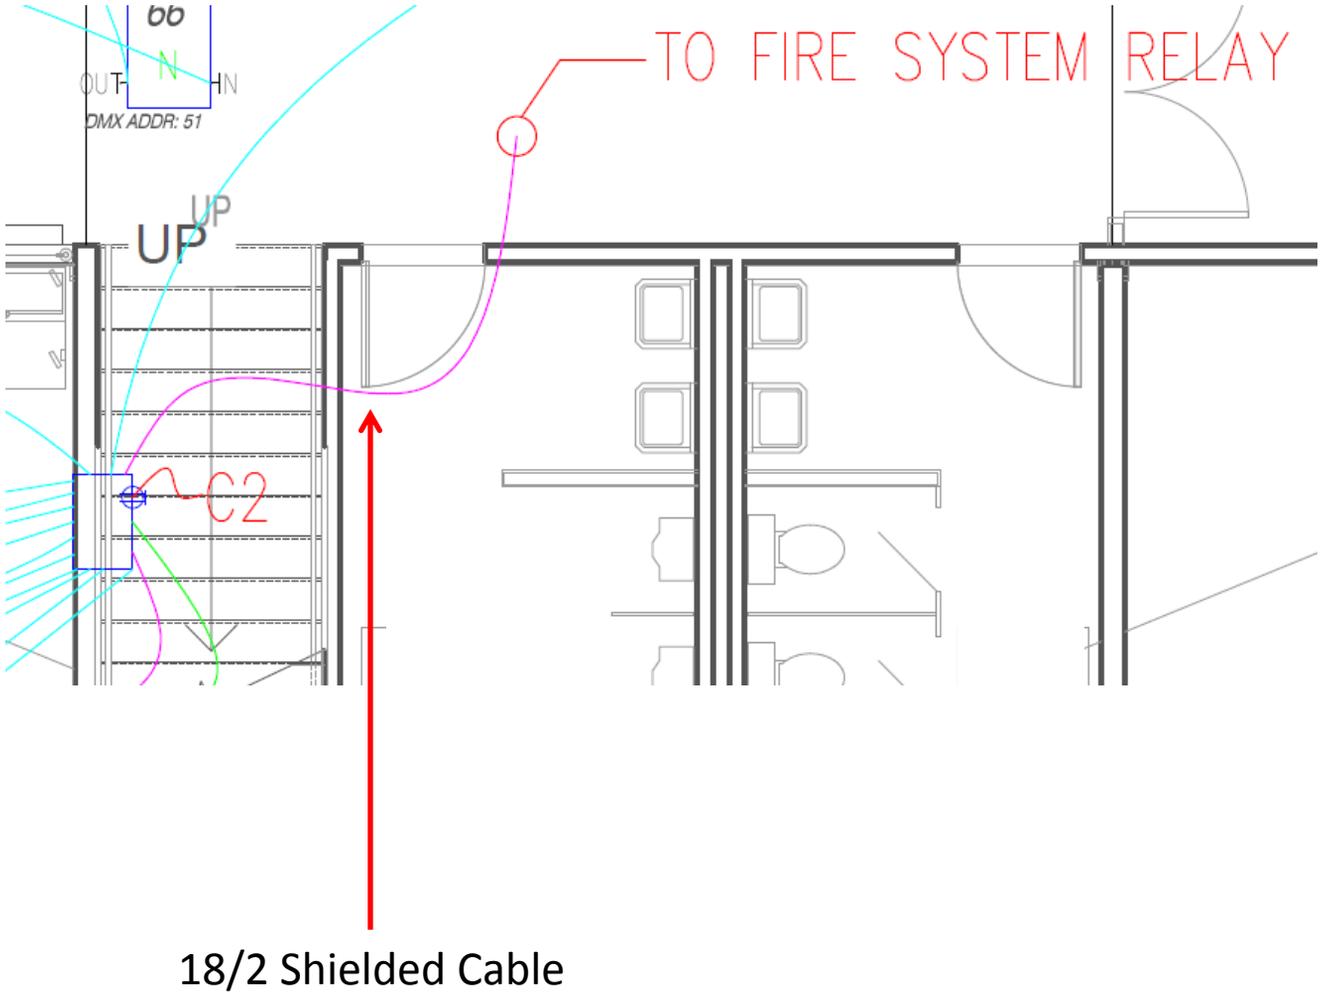


11. Mount Equipment Rack

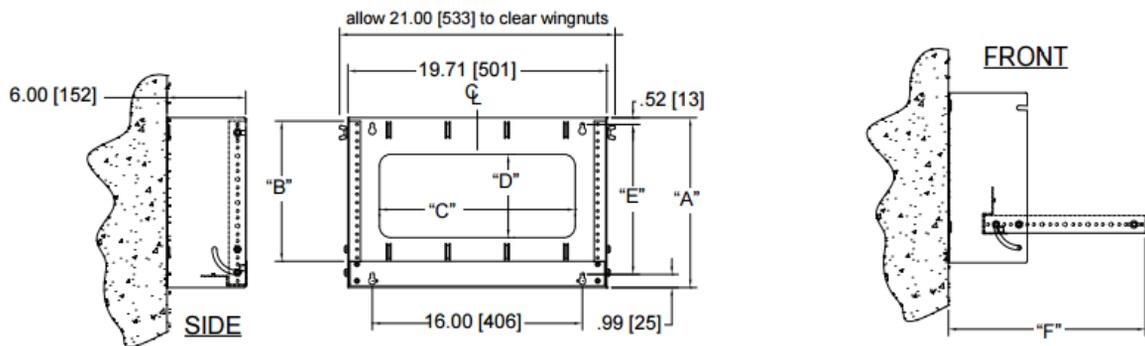

- Be sure the equipment rack is properly secured to block or wall studs.
- Pull and secure all control cables to rack position.

12. Install Control Cable Connectors

- Solder on the male 5-Pin XLR connectors.
 - Pin #1- Shield
 - Pin #2 – Positive (White Or Red Cable)
 - Pin #3 - Negative (Black Cable)

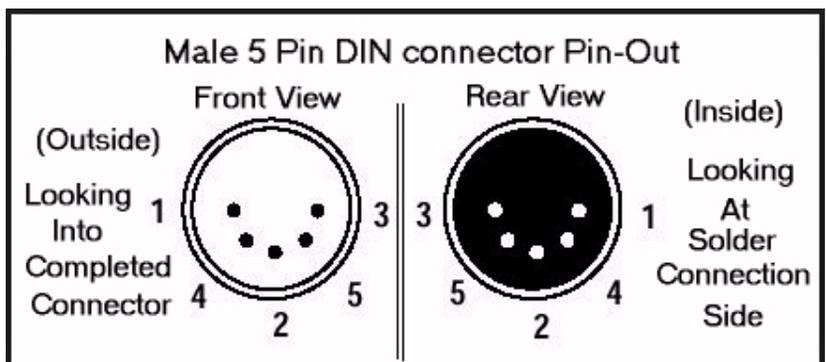

13. Energize The System

- When the fixtures are energized without the equipment rack having power; the lamps in the high bay fixtures will default to white.
- When the equipment rack and the high bay fixtures are energized and the lighting control PC is not connected the high bay fixtures will not have any output. Or will look to be off.

14. Connect the control PC to the CAT5e control cable.

14. Turn on PC and start control software.

14. Select a lighting playback.

- The lighting should play the light scene selected.
- Then customize your programming

17. If the system does not operate correctly:

- Check to be sure the entire system has power.
- Check all cable connections.
- Check the software is configured correctly
- Test one universe at a time.

Contact DFX with questions.



465 Taunton Avenue, Suite 108, West Berlin, NJ 08091
856-719-1112, 856-719-8868 Fax, www.dfxsoundvision.com